



简体中文

使用方法：

在使用三脚架前，把脚架的高度和角度调整到合适的位置，以确保三脚架能平稳地放置在一个水平面上，然后把相机固定在三脚架云台上面，确保脚架和云台完全锁紧，防止照相机意外滑落。

三脚架角度调节：（如图1所示）

三脚架的角度调节，以适应在凹凸地面和高低角度拍摄。

调整好角度后，要把角度调节片推到锁紧的位置。旅游天使三脚架可进行反向180° 折叠，以便减少占用空间，利于携带。

三脚架高度调节：（如图2&3 所示）

三脚架脚管为多节数脚管，通过伸缩脚管调节三脚架高度。每一节脚管（除最后一节外），都有防转槽和防转条防止脚管转动。这样可以快捷的打开和收放三脚架。

中轴：（如图4、5所示）

逆时针拧开中轴锁紧圈，把中轴调到合适位置，然后顺时针旋转中轴锁紧圈锁紧中轴，记住不要过度锁紧中轴，这样会毁坏螺纹。

六角扳手：（如图6所示）

通过 六角扳手调节脚架螺丝松紧度。

可伸缩挂钩：（如图7所示）

在刮风时，需要挂上重物增加三脚架的稳定性可在挂钩上挂上沙袋、照相机袋或类似的物品。注意不能超重，否则反而会影三脚架的稳定性。

反转中轴：（如图8、9、10所示）

可反转中轴可以拍摄特写镜头、复制图片和拍摄难接近的物体。将中轴底部螺丝拧开，拧松中轴锁紧圈将中轴取出，将中轴倒置然后锁紧。

三脚架转换为独脚架：（如图11所示）

a、将弹簧挂钩从中轴旋出，拿出中轴；
b、将带海绵套的脚管从脚管接头旋出；
c、中轴云台组件与脚管组件装配；
完成三脚架到独脚架的转换。

三脚架转换为独脚架：（如图12所示）

a.将带海绵套的脚管从脚管接头旋出；
b.云台转接板与脚管组件装配；

三脚架转换为登山杖：（如图13所示）

a.将带海绵套的脚管从脚管接头旋出；
b.将手带和手柄与脚管组件装配；

快装夹安全锁紧系统：（如图14所示）

本快装夹锁紧系统设计有安全保险装置可防止因人为原因导致误操作而使器材滑落。逆时针拧松快装夹锁紧旋钮,拧到安全装置后,拉出锁紧旋钮继续逆时针拧松,即可卸下快装板。

快装板安装：（如图15所示）

云台角度调整：（如图16所示）

云台球体锁紧调节：（如图17所示）

云台阻尼调节：（如图18所示）

云台水平旋转及锁紧：（如图19所示）

繁體中文

使用方法：

在使用三脚架前，把脚架的高度和角度调整到合适的位置，以确保三脚架能平稳地放置在一个水平面上，然后把相机固定在三脚架云台上面，确保脚架和云台完全锁紧，防止照相机意外滑落。

三脚架角度调节：（如图1所示）

三脚架的角度调节，以适应在凹凸地面和高低角度拍摄。

调整好角度后，要把角度调节片推到锁紧的位置。旅游天使三脚架可进行反向180° 折叠，以便减少占用空间，利于携带。

三脚架高度调节：（如图2&3 所示）

三脚架脚管为多节数脚管，通过伸缩脚管调节三脚架高度。每一节脚管（除最后一节外），都有防转槽和防转条防止脚管转动。这样可以快捷的打开和收放三脚架。

中轴：（如图4、5所示）

逆时针拧开中轴锁紧圈，把中轴调到合适位置，然后顺时针旋转中轴锁紧圈锁紧中轴，记住不要过度锁紧中轴，这样会毁坏螺纹。

六角扳手：（如图6所示）

通过 六角扳手调节脚架螺丝松紧度。

可伸缩挂钩：（如图7所示）

在刮风时，需要挂上重物增加三脚架的稳定性可在挂钩上挂上沙袋、照相机袋或类似的物品。注意不能超重，否则反而会影三脚架的稳定性。

反转中轴：（如图8、9、10所示）

可反转中轴可以拍摄特写镜头、复制图片和拍摄难接近的物体。将中轴底部螺丝拧开，拧松中轴锁紧圈将中轴取出，将中轴倒置然后锁紧。

三脚架转换为独脚架：（如图11所示）

a、将弹簧挂钩从中轴旋出，拿出中轴；
b、将带海绵套的脚管从脚管接头旋出；
c、中轴云台组件与脚管组件装配；
完成三脚架到独脚架的转换。

三脚架转换为独脚架：（如图12所示）

a.将带海绵套的脚管从脚管接头旋出；
b.云台转接板与脚管组件装配；

三脚架转换为登山杖：（如图13所示）

a.将带海绵套的脚管从脚管接头旋出；
b.将手带和手柄与脚管组件装配；

快装夹安全锁紧系统：（如图14所示）

本快装夹锁紧系统设计有安全保险装置可防止因人为原因导致误操作而使器材滑落。逆时针拧松快装夹锁紧旋钮,拧到安全装置后,拉出锁紧旋钮继续逆时针拧松,即可卸下快装板。

快装板安装：（如图15所示）

云台角度调整：（如图16所示）

云台球体锁紧调节：（如图17所示）

云台阻尼调节：（如图18所示）

云台水平旋转及锁紧：（如图19所示）

English

SET UP:

Before using your tripod, adjust each leg section to the desired height and leg angle setting. Ensure that the tripod is firmly resting on a level surface and mount your camera carefully on the tripod head. Always engage safety locks on the tripod head to prevent any accidental dismounting.

Leg Angle Adjustment: (See figure 1)

To accommodate uneven terrain, awkward shooting situations or for low angle shooting, your Benro tripod includes a 3-position leg angle adjustment sliding lock. Ensure that the leg angle lock is securely pushed back into the lock position after you have selected the desired leg angle. Travel Angel Tripod leg can be folded inverted by 180° ,makes it small enough to carry.And it can be taken to the air plane.

Leg Section Adjustment: (See figure 2 & 3)

Each leg section can be independently adjust to the desired length by turning the proper leg lock grip counter-clockwise until the leg is free to slide in or out. Once the desired length is achieved turn the leg lock grip clock-wise until the leg section is securely locked. Repeat this step for each leg and each section until the tripod is set to the desired height.

Raising and Lowering the Center Column: (See figure 4, 5)

To raise or lower the center column, turn the center locking knob counter-clockwise and set the column to the desired position. While holding the column in position, turn the column locking knob clockwise to secure the column in place. Don't over tighten the center column lock, as this could damage the threads.

Allen Key: (See figure 6)

To adjust the tightness of the tripod leg by allen key.

Retractable Weight Hook: (See figure 7)

When additional weight is necessary to add to the tripod for stability during windy conditions, the retractable weight hook can be used to hold a sandbag, camera bag or any similar item. Take care not to overload the tripod with weight as this could have a reverse effect on increasing the tripods stability.

Reversible Center Column: (See figure 8,9,10)

Your tripod offers the ability to reverse the center column for close-up photography, copy work and for difficult to reach object. To reverse the center column unscrew the retractable weight hook located on the bottom of the center column. Loosen the center column locking knob and pull the center column out. Insert the center column with the mounting plate upside down, and tighten the center column locking knob securely. The center column has an anti-twist groove, be sure to line-up the groove with the key before inserting the column back into the main casing. Please note: Do not reverse the center column when a camera or equipment is mounted.

Anti-Twist Leg Sections: (See figure 12, 3)

For quick and easy setup each leg section(excluding the last section) incorporates a key and groove within the leg to prevent the leg from rotating.

To Assemble a Monopod: (See figure 11)

a. Unscrew the spring hook and then take center column assembly(with head) out;
b. Unscrew the tripod leg foam grip from leg adapter;
c. Screw and assemble the center column assembly(with head) onto the foam grip tripod leg. A monopod kit is converted from a tripod.

To Assemble a Monopod: (See figure 12)

a. Loosen out one of the tripod legs with foam grip.
b. Connect the head adaptor with tripod leg.

Tripod transfer to Crutch: (See figure 13)

a. Loosen out one of the tripod legs with foam grip.
b. Connect the hand strap and crutch head together with Tripod leg.

Quick Release Knob with safety: (See figure 14)

Based on Benro quick release system, we add safety designing system on this new knob, which can avoid your equipment to drop out due to human mis-operation. Loosen quick release knob at anti-clockwise direction until to safety position, pull out the lock lever slightly and continue to loose the knob at same direction, then you can dismount the camera plate.

QR Plate Mounting: (See figure 15)

Head Angle : (See figure 16)

Ball Lock Adjustment : (See figure 17)

Drag Adjustment : (See figure 18)

Head pan Lock : (See figure 19)

